

Touch Remote IR/RF (Crypt)

(Attention! The S4073 Remote can be used with the S4023G Transceiver Module and the SC7001E Security Console only.)



Functions:

- ♦ Encrypted ID will prevent the Remote signal interference from your neighbours.
- ♦ Touch-Screen (pseudo) Remote (IR/RF).
- ♦ Control 256 lamps or appliances On/Off.
- ♦ "All Lights On/All Units Off" function.
- ♦ Dimmer for incandescent Lamp only.
- ♦ Compatible with any X10 IR/RF transceivers.
- ♦ Codes set electronically.
- ♦ Backlight Keyboard.
- ♦ Macro function: 4 scenes (16 commands p/scene).
- ♦ IR Learning function (38 KHz IR commands).
- ♦ Can control up to 4 IR devices with 4 commands p/device, such as VCR, DVD, TV, and so on.
- ♦ Keystroke indication sound - ON/OFF.

Before using your Remote:


Use the following batteries in this Remote:
R6 (size AAA), Alkaline Batteries.

Batteries that cannot be used:

Manganese batteries, Lithium batteries, NiCad batteries, Nickel Hybrid batteries. If you use the batteries described above, we cannot guarantee full performance of the Remote control.

To unlock the Remote: Press "**Air**" and "**TV**" buttons together, press this buttons again for Remote lock.

Keypad functions:

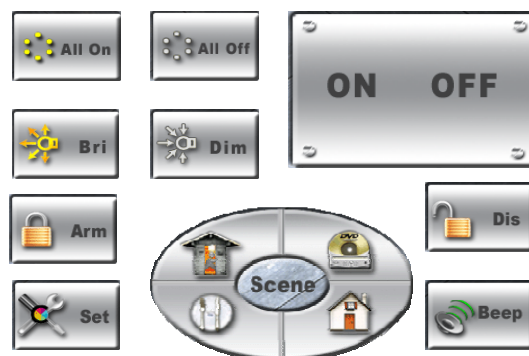

House/Unit Code Keypad:

House Code: A-P Unit Code: 1-16

ON / OFF Key:



Select the Unit code, and then ON or OFF key to Turn ON or Turn OFF the lamps or appliances in your home.

Brighten / Dim Key:



Select the Unit code. Then use Bright or Dim key to Bright / Dim the incandescent lamp only. Also can be used to adjust the Motorised Curtain stop place.

All On / All Off Key:



Select the House code. Press All On or All Off key for All lights On / All Units Off command.

Arm Key:



Arm Key for the SC7001E Security system arming. Press and hold key for 2 seconds. After this the SC7001E security system, will enter the "Armed" modus after 30 seconds. "ARM AWAY" is default mode.

Note: To avoid an alarm if someone is still in the house, press "Arm" key. Please take care!

"Arm" and "Disarm" keys work with SC7001E Security Console only. For more info look at the SC7001E Security Console User manual.

Disarm Key:

Disarm Key for Alarm system disarming. Press and hold for 2 seconds for security system disarming from "ARM AWAY" mode.

Set Key:

This key is for setting up every function: Scene / IR Control, and so on.

Beep Key:

Keypad beeps activation. Press once for Enable, again for Disable mode.

Scene Key:

Up to 4 Scenes can be set with 16 commands in each Scene.

Command indication LED (on top, left side):

During operation, Indicator LED blinks once for command setup success. No indicator blinks when you use a House/Unit Code keypad. Indicator LED is bright after entering the Setup mode.

◆ Enter / Exit Setup mode:

Enter: Press the "Set" key and hold for 5 seconds. Indicator LED will bright. For exit press "Set" key once again.

◆ House Code set: Press and hold "House" button. In the same time, press the house code button on keypad. The indicator blinks 3 times if

setup was successful.

The Remotes default House Code is A. If you want to control B4 unit, switch House Code from A to B. Press "House" button and B key. Now you can press on keypad 4 and then "ON" command.

◆ IR devices Setup:

Press "Set" key and hold for 5 seconds to enter a "Setting" mode.

Press the IR devices button on the Remote, the Indicator LED blinks once and then is bright.

Then choose and press IR Learning button. The Indicator LED blinks once and then is bright. (Power button is for IR Turn ON and Turn OFF commands only).

Now use your original Remote to send an IR signal aiming at the receiving port of Touch-Screen Remote. See the Figure 1.

The Indicator LED blinks twice and then is bright after successfully signal receiving.

◆ Scene Setup:

1. Press the "Set" key and hold it for 5 seconds to enter a Setup mode.
2. Press the "Scene" key. Indicator LED blinks once and then is bright.
3. Enter 16 different address codes continuously. Press the "Set" key again for finish if address codes amount are less than 16. Indicator LED blinks once and then is bright.
4. Enter now ON command. Indicator will blink 6 times, fast and then is bright.

◆ Change X10 signal from RF or IR:

Press the "Set" key to enter the Setup mode. Press on keypad: 9, 9, and 8 in turn. Indicator blinks twice for RF or three times for IR - X10 signal mode. Press "Set" key for exit from the Setup mode.

◆ SOS function:

Press "Arm" and "Disarm" keys together for SOS. The SC7001E, security console, will send a Call to Alarm Centre. Indicator blinks continuously very fast and the beep signal are long.